

Fireside – Trustees

You can manually operate the temperature in your room by using the “On/Off” button on the left side of the big number. The large number in the middle of the screen indicates the temperature in the space. The “Up/Down” arrows on the right control the temp +/- 4 degrees between 70 & 74. The small number on the right indicates the set point which is what temperature your space wants to be.

Fireside & Trustees is either in “Heating” or “Cooling” mode dependent on time of year. This means that if we get an abnormally warm day during the heating mode air conditioning will not be available and if we have an abnormally cold day during the spring, we will not have access to heating if we are in cooling mode. Please watch for seasonal emails which will indicate switches between modes.

