



Procedure for using A/V equipment in Hoffberger 131

Using the Projector

- Use the **Power Button** on the Projector Remote to turn on Projector.
- Point the remote at the projector (not the projection screen).
- Select the correct input you want to display
 - Press the **Computer 1** or **Computer 2** button for Main or Guest Computer
 - Press **Video** for DVD, and VCR
 - Press **S-Video** for the Document Camera
- Press the volume buttons on the bottom of the Projector Remote to adjust the volume level.

Note for VCR...

- Use Samsung remote to control VHS play.

Note for DVD...


- VCR must be on and the channel must be set to **L2** in order to play DVD. Do this using the channel buttons on the JVC remote.
- Control DVD player with DVD remote.

ON/OFF Switch



Volume control

Projector Remote

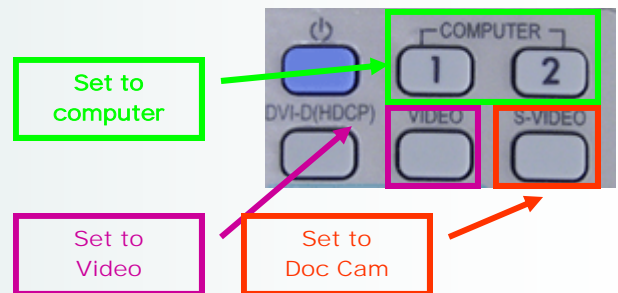

Need Help Troubleshooting? Call the HelpDesk (x6322)

