

## USING THE IPOD

### Play

Use the iPod itself to select what you would like to play. Once you have pressed play on the iPod, you can control play/pause, as well as scrolling to the “next” or “prev” song on the front left of the boom box. Simply press the play button to play or pause your music.

Then use the search buttons to scroll back and forth through the songs.



Next

Previous

Play / Pause

Center for Teaching, Learning, and Technology

1021 Dulaney Valley Road  
Baltimore, Maryland 21204  
Phone: 410-337-6066  
E-mail: [ctlit@goucher.edu](mailto:ctlit@goucher.edu)

x6066

Center for Teaching, Learning, and Technology  
[ctlit@goucher.edu](mailto:ctlit@goucher.edu)

# iPod Boom Box Basics



## BASIC SETUP

### Using the Power Adapter

The power adapter is plugged into the back of the boombox. Plug the other end into an electrical socket. The boombox can run on 8 C batteries if you choose not to use the power adapter.



\*Batteries not provided

### Turning the Power On

The power switch is located on the top left of the boom box. If you are using an iPod, make sure the switch is set to "iPod/AUX" and the boom box will turn on automatically when you insert the iPod into the front slot.

\*You will know the boom box is on when the clock display lights up blue.



Power Switch

## USING THE RADIO AND CHANGING THE VOLUME

### Radio

To use the boom box for radio, Slide the power switch to "Radio". Then use the switch on the top right to go between AM and FM radio. The antenna for the radio is located on the back right of the boom box. To use the antenna, simply pull it up.

### Volume/Tuning

The volume dial is located on the left of the boom box. You must use this to control the volume, not the volume control on the iPod itself. The tuning dial is located on the right side of the boom box.



## USING AN IPOD

### Inserting the iPod

On the front of the boom box is a slot for an iPod. Simply insert the iPod into the slot, making sure the bottom of the iPod lines up with the connector in the slot on the boom box.



\* The connector on the boom box can be slid right and left to accommodate different iPods.