

A decorative border around the page consisting of a black film strip with white sprocket holes, with a red border inside it. There are small white icons of a VHS tape and a DVD disc in the corners.

# VHS TO DVD MULTI REGION DUBBING

**Note: This machine will only record DVD-Rs**

1. Place the original tape in the left VCR.
2. Place a blank DVD-R in the right DVD player/recorder.
3. Make sure the VCR is set to L2 and the DVD player is set to A4 by using the channel UP and DOWN buttons on the machine or remote.
4. Set both TVs to AV1 by pushing the TV/AV button on the TV's front until AV1 appears in the top left corner of the screen.
5. Select the region for your original media by pressing one of the buttons to the right of the VCR. Your DVD copy will only be recorded in NTSC format (the format used in the United States).
6. Press PLAY on the left VCR.
7. Press RECORD on the right DVD player
8. After recording, press STOP on the VCR.
9. Press the FUNCTIONS button on the DVD remote.
10. Use the up and down arrows on the DVD remote to select OTHER FUNCTIONS at the bottom and then DVD MANAGEMENT
11. Again, using the up and down arrows on the DVD remote, select FINALIZE at the bottom of the list. In the following prompts, press YES and then START.
12. The process should take a few minutes. When it is complete, your DVD copy will be playable on a computer or a DVD player.

Please make sure to take both your original VHS tape and DVD copy when you leave.

**PATRONS ARE EXPECTED TO ADHERE TO THE GOUCHER COLLEGE COPYRIGHT POLICY. SEE [HTTP://WWW.GOUCHER.EDU/X4609.XML](http://www.goucher.edu/x4609.xml) FOR MORE DETAILS.**